
ENCORE WATER BELL FOUNTAIN™

 
by Woodstock Chimes®

ASSEMBLY INSTRUCTIONS

Water bubbles up through a center cluster of brass bells, while two floating bells softly chime against the others as they swirl around the fountain.

Perfect for the home or garden

Thank you for purchasing the Encore Water Bell Fountain. This fountain is designed to combine the relaxing sounds of flowing water with the peaceful chiming of brass bells. This effect is created by two floating bells, which softly chime against a center cluster of stationary bells as they are swept around the fountain by an underwater current created by the pump.

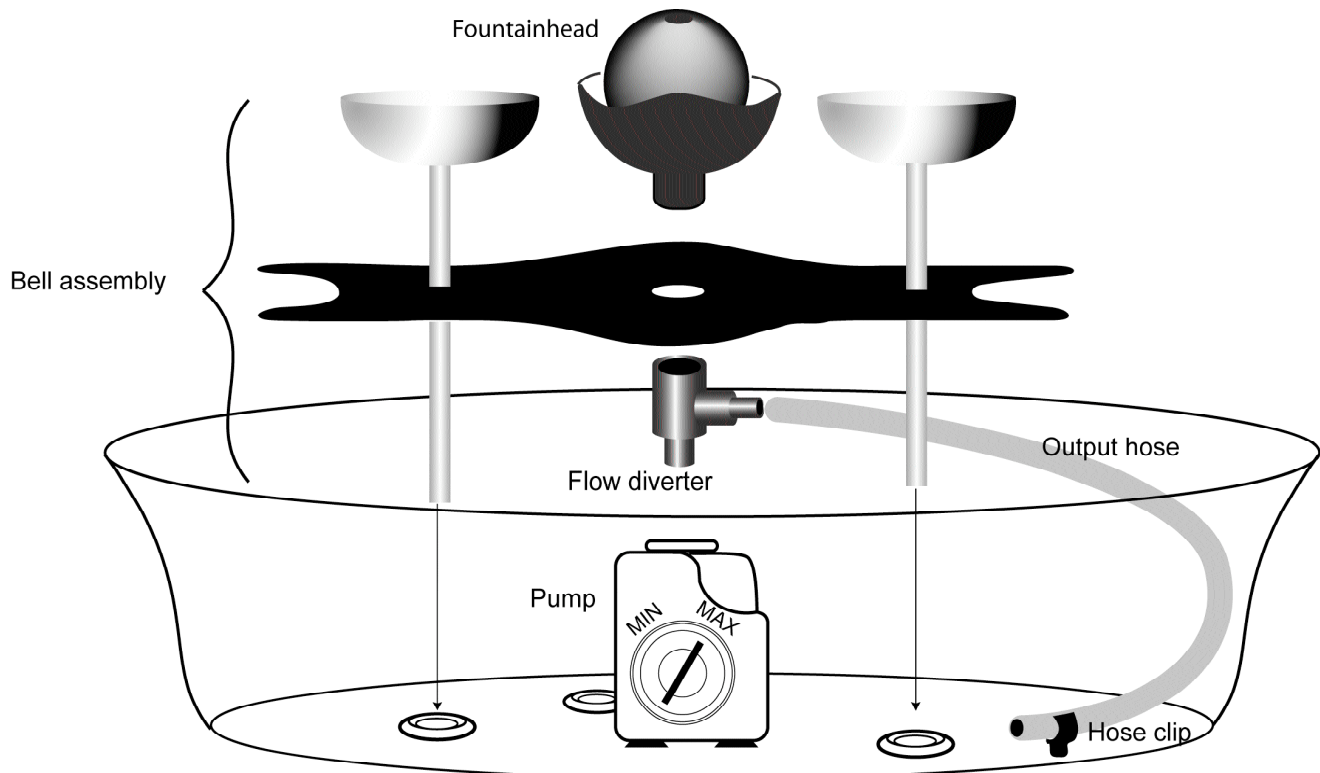

PARTS LIST

When you unpack your fountain you should find:

- Bowl with Pump attached
 - The Bell Assembly, made up of six bells mounted on a plastic base (only two bells shown)
 - Flow Diverter
 - Output Hose
 - Fountainhead
 - Two floating bells (brass bells mounted to foam floats - not shown)
-

FOUNTAIN ASSEMBLY

Step 1: Insert the large end of the flow diverter up through the hole in the center of the bell assembly. Insert the fountainhead into this end of the flow diverter.

Step 2: Attach the output hose to the side of the flow diverter and anchor the end of the hose to the bottom of the bowl by attaching it to the hose clip as shown.

Step 3: Insert the bottom end of the flow diverter into the hole at the top of the pump. Place the bell assembly so that each leg is resting in one of the raised circles at the bottom of the bowl. The end of the output hose should be oriented so that the water will flow in a clockwise direction around the bowl.

Step 4: Tuck the power cord into the notch on the underside of the bowl and place the fountain on a level surface. Using distilled water (highly recommended), fill the bowl approximately 3/4 full or so that the water level is about one inch below the rim of the bowl. Add the two floating bells, taking care that they are level when placed in the water (otherwise they may tip over). Add water until the rims of the floating bells are even with the rims of the six fixed bells. The fountain will not function properly with too little water, and the pump should never be allowed to run dry.

Step 5: Now you are ready to plug in your fountain. Be sure that the power cord loops below the electrical outlet to form a “**drip loop**.” In the event of a leak or spill this will prevent water from running down the cord into the electrical outlet.

You can adjust the speed of the floating bells by turning the flow control on the side of the pump.

MAINTENANCE AND USE

1. **Adding water:** When adding water, always use clean distilled water. Using distilled water is highly recommended to reduce mineral build-up and extend the life of the pump. Your fountain should be checked for water level at least once every 2 to 3 days during continuous operation.

2. **Continuous operation:** The pump is designed to operate continuously for extended periods. In order to ensure long pump life, it is recommended that you clean the fountain and pump, approximately every 2 to 3 months of operation.

3. **Operating temperature:** Do not operate fountain with water above 30° C (89° F). Also, do not expose to temperatures below freezing. This could damage both the pump and bowl.

The Encore Water Bell Fountain is adapted from an original copyrighted design by artist/musician Ron Snider.

Woodstock Percussion, Inc.
Shokan, NY 12481-5124 USA
800-422-4463 • 800-4-A-CHIME • Fax: 800-974-0622 • E-mail: woodstock@chimes.com • www.chimes.com