

# Woodstock Garden Bells®

WGBLG3

*Please read!*

Your Woodstock Garden Bells are an attractive home or garden accessory with a unique sculptural appeal. To enhance the experience of your Woodstock Garden Bells, please try the following suggestions:

- Be sure that the GardenStone™ is on level ground, in an elevated and unobstructed location which will yield the most air movement.
- If the bells are leaning to one side, place your hand at the base of the stalk of wires and gently bend them in the desired direction.
- For the best chance of sound, the bells should be close together, yet not touching.
- The small coiled wires at the bottom of the stalks are ornamental. These coils should not be wrapped around the stems, as they will interfere with the movement of the bells.

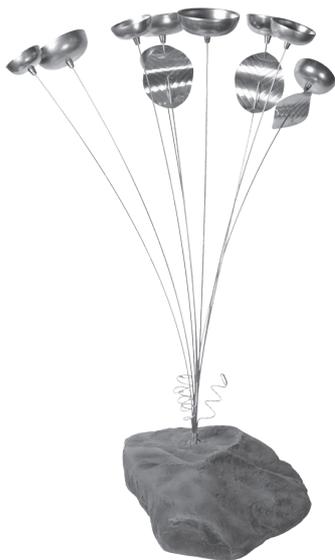


Fig. 1

Your Woodstock Garden Bells come with brass “leaves” attached to three of the stems. They are designed to catch the wind, to encourage movement of the bells when the wind blows. These leaves **SHOULD NOT** be removed. For optimal performance, they are positioned at the top of the stem, just below the bell, during the assembly process (Fig. 1).

We do not recommend adjusting the brass leaves. However, if by chance they have moved during shipment, you may want to reposition them. Please do so very carefully! Their edges may be sharp and “over-adjusting” may elongate the holes, causing the leaves to slip on their stems. To move up or down, **DO NOT** force the leaf. Gently squeeze the leaf’s upper and lower ends toward each other until you can slide the leaf easily (Fig. 2). Once you have adjusted the leaves, they should not require further adjustment and are best left alone.



Fig. 2

*Caution:*  
Woodstock Garden Bell leaves may have sharp edges. Do not allow children to play with them.