

Woodstock Chime Tree Display™

Assembly Instructions

DISCT2

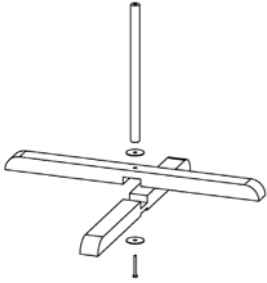


FIG. 1

Parts List:

- | | |
|--------------------------------|-------------------------------|
| 2 Wooden cross pieces | 1 Metal spool adaptor |
| 2 Washers | 1 Metal top piece (w/6 holes) |
| 1 Bolt | 12 Wire arms |
| 4 Metal upright pieces | 1 Header |
| 6 6-inch hooks (1 HB6 package) | |

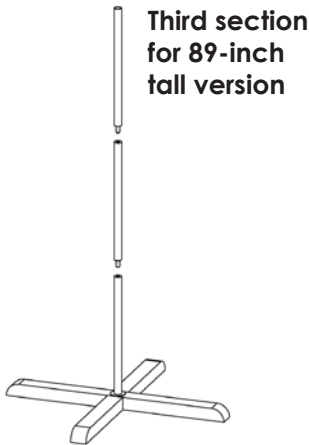


FIG. 2

Assemble base, as shown in Fig. 1 by inserting bolt through washer, both cross pieces, second washer and then threading it into the bottom third of the upright. Tighten with an adjustable wrench.

For a 73-inch Tall Version:

Screw the next upright section into the first, as shown in Fig. 2. Screw the spool adaptor into this second upright piece.

For an 89-inch Tall Version:

Screw the next two upright sections into the first, as shown in Fig. 2. Screw the spool adaptor into this third upright piece.



FIG. 3


Insert three wire arms through adjacent holes in top piece and insert entire assembly into the upright.

While holding the arm assembly in place, insert remaining arms through top piece, as shown in Fig. 3. You may have to lift up on the arm assembly in order to insert the last three arms. Press down on the top piece until the arm assembly is firmly seated. Attach header card.



FIG. 4

Place the six remaining arms into the spool adaptor, being careful to insert the arms through both the top and bottom aligned holes of the adaptor, as shown in Fig. 4.

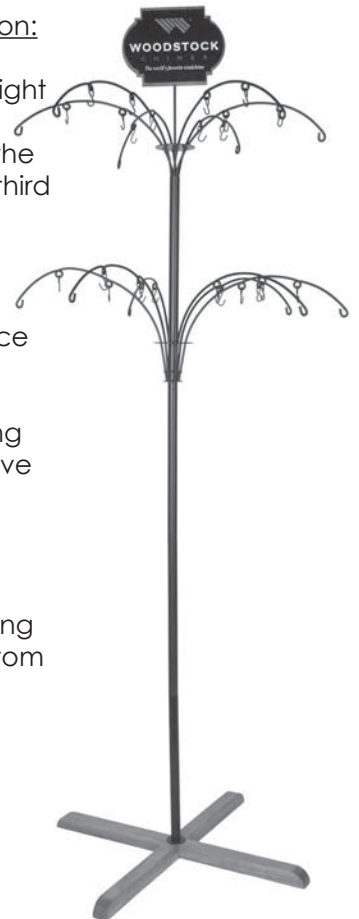

Woodstock Percussion, Inc.

167 DuBois Road • Shokan, NY 12481 USA
(800) 422-4463 • (800) 4-A-CHIME • E-mail: woodstock@chimes.com • www.chimes.com

1314R1-instructions
08/26/09

©2009 WPI