


☞ **Note:** If unit is not level once completely assembled, adjust levelers by twisting clockwise or counter-clockwise to either increase or decrease height.

### Suggested Planogram for Music Collection Display



# Music Collection Single Panel Display

## Assembly Instructions COL3

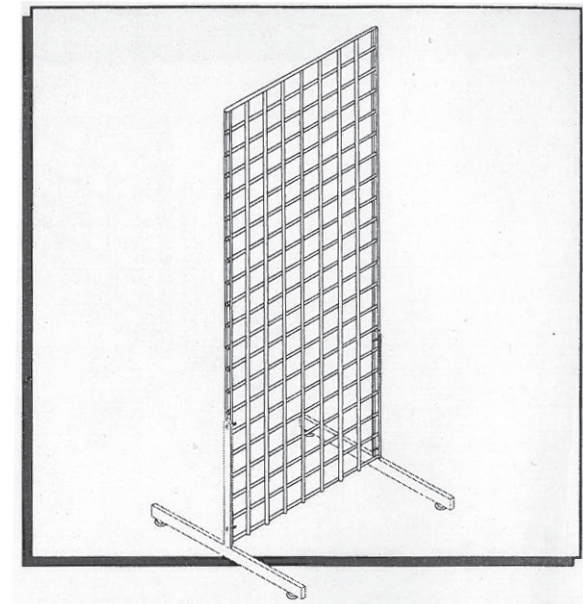

**Woodstock Percussion, Inc.**

Shokan, NY 12481-5124 USA

800-422-4463 • 800-4-A-CHIME • Fax 800-974-0622

E-mail: woodstock@chimes.com • www.WoodstockChimes.com

COL3Ins041216  
Revised 04/12/16


©2016

## Parts List



- A. Leveler ..... 4 Pcs.
- B. T-Leg..... 2 Pcs.
- C. Gridwall Panel ..... 1 Pc.
- D. Screw..... 4 Pcs.
- E. Washer..... 4 Pcs.
- F. Nut..... 4 Pcs.

## Additional Components


- 6" Grid Hooks ..... 4 Pcs.
- 12" Grid Hooks ..... 4 Pcs.
- 12" Wire Basket ..... 1 Pc.
- 24" Wire Basket ..... 1 Pc.
- 12" Flat Shelf ..... 2 Pcs.
- 24" Flat Shelf ..... 1 Pc.
- Display Sign ..... 1 Pc.
- Sign Clips ..... 2 Pcs.

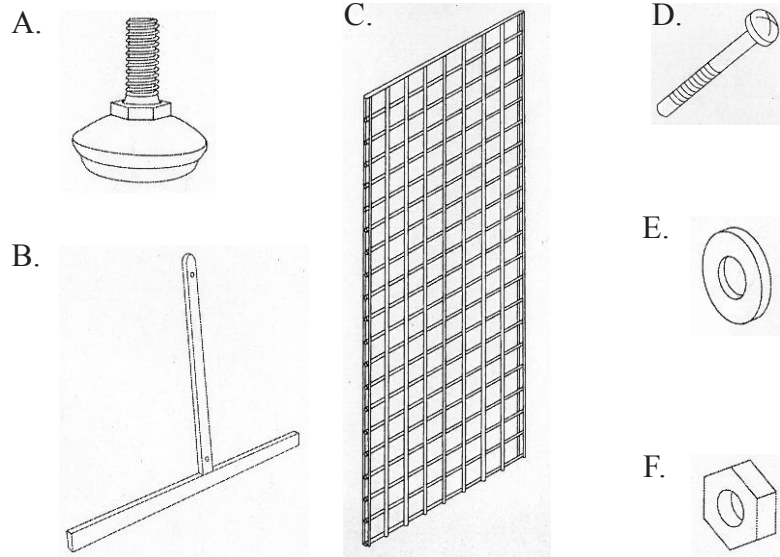

## TOOLS NEEDED

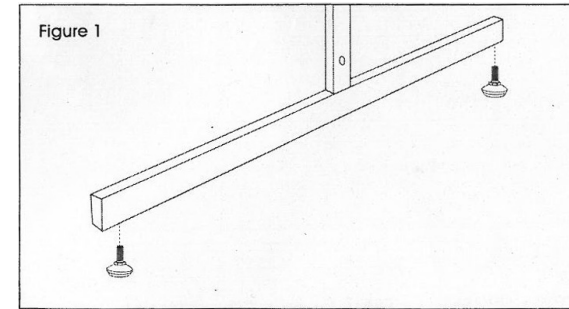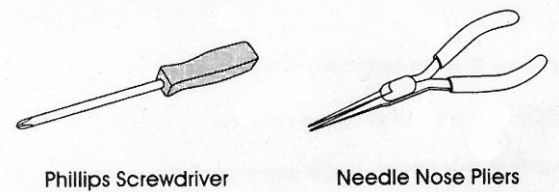

**Step 1.**  
Screw Levelers (A) into pre-threaded holes on bottom of T-Legs (B).  
(See Figure 1)

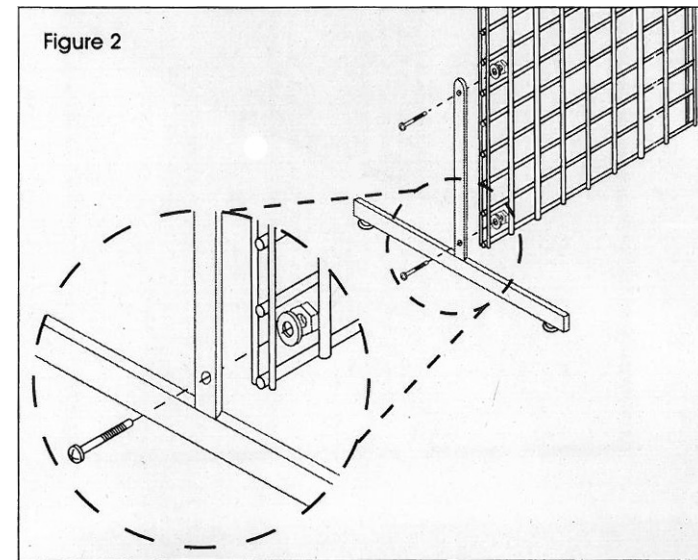

**Step 2.**  
Line one T-Leg up with the side of the Gridwall Panel (C) so that the holes face the first and sixth open squares. (See Figure 2)

**Step 3.**  
Push one Screw (D) through each hole in T-Leg and double wires in Gridwall Panel. From the inside of the panel, attach Washers (E) and Nuts (F).  
(See Figure 2)

☞ **Note: Gridwall panels have double wires on vertical sides.**

**Step 4.**  
Repeat on opposite side with second T-Leg.