

Assembly Instructions

Woodstock Chimes Tabletop Display

DISPC

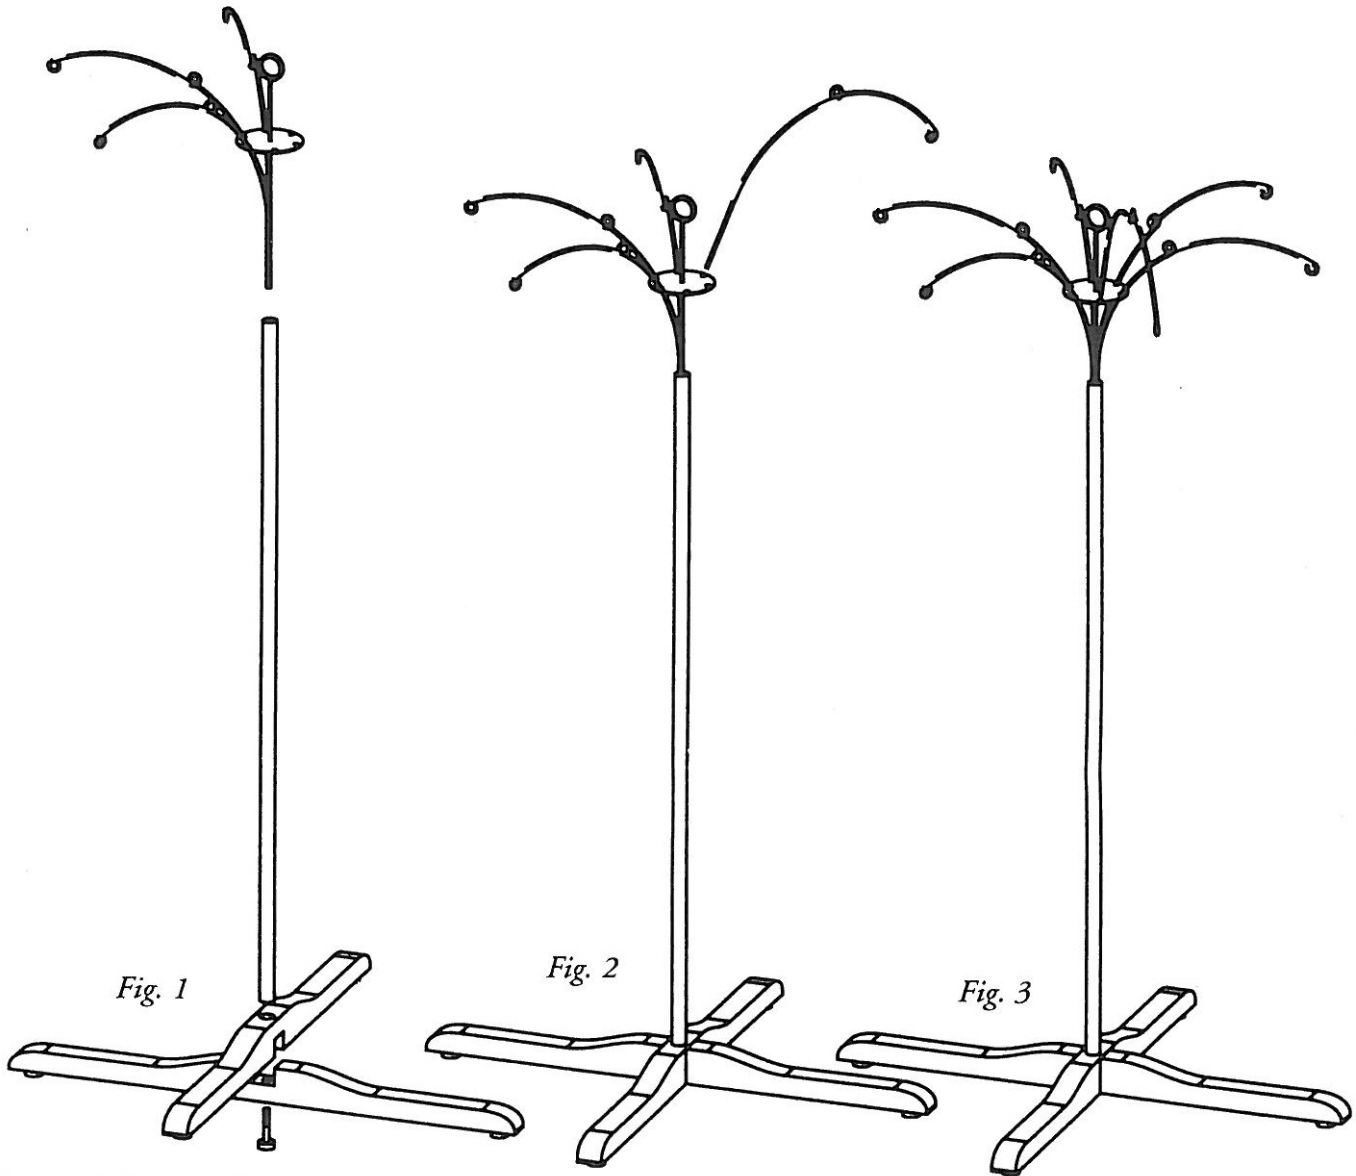


Fig. 1

Assemble base, as shown in Fig. 1. Insert bolt and thread upright onto bolt. Tighten with an adjustable wrench if necessary.

Fig. 2

Insert three wire arms through adjacent holes in top piece and insert entire assembly into upright, as shown in Fig. 2.

Fig. 3

Insert remaining arms through top piece, as shown in Fig. 3, and attach header card.



Woodstock Percussion, Inc.
Shokan, NY 12481-5124
www.chimes.com

10/01/2009
©2009 WPI
File # 1139INS100109