



Woodstock Chimes®

Why Woodstock • Slim Sign Hanging Instructions

- Promote Woodstock Chimes brand awareness
- Display the Why Woodstock story, it closes sales
- Beautiful signs draw customers into your store or to your Woodstock Chimes display
- Let customers know you carry the windchime more customers ask for by name
- Call for replacements or additional signs - they're FREE!

Hang this eye-catching sign on a display or wall near your Woodstock Chimes display, positioning it at eye level for maximum effect. Take care when hanging the sign to ensure it hangs straight.

You can use double-stick tape to hang it on a wall or our Chime Tree, Gazebo Stand or Mobile Trellis Displays. Or use the enclosed clips to hang the Slim Sign on our Woodstock Chimes Arbor Displays.

Follow these steps and judge the sign's position, by eye

1.



Position clips on the display roughly 18" to 20" apart.

Remove protective paper from top clip.

2.



Position sign and press to stick onto clip.

3.



Repeat for bottom clip, making sure the sign will hang straight.

Alternatively:



Use a ruler to mark the center of the sign and stick the clips in line with each other on the back of the sign. (Center is 2.75".)

The World's Favorite Windchime™