


# ASSEMBLY INSTRUCTIONS

## Chimalong® XR

### CH1XR

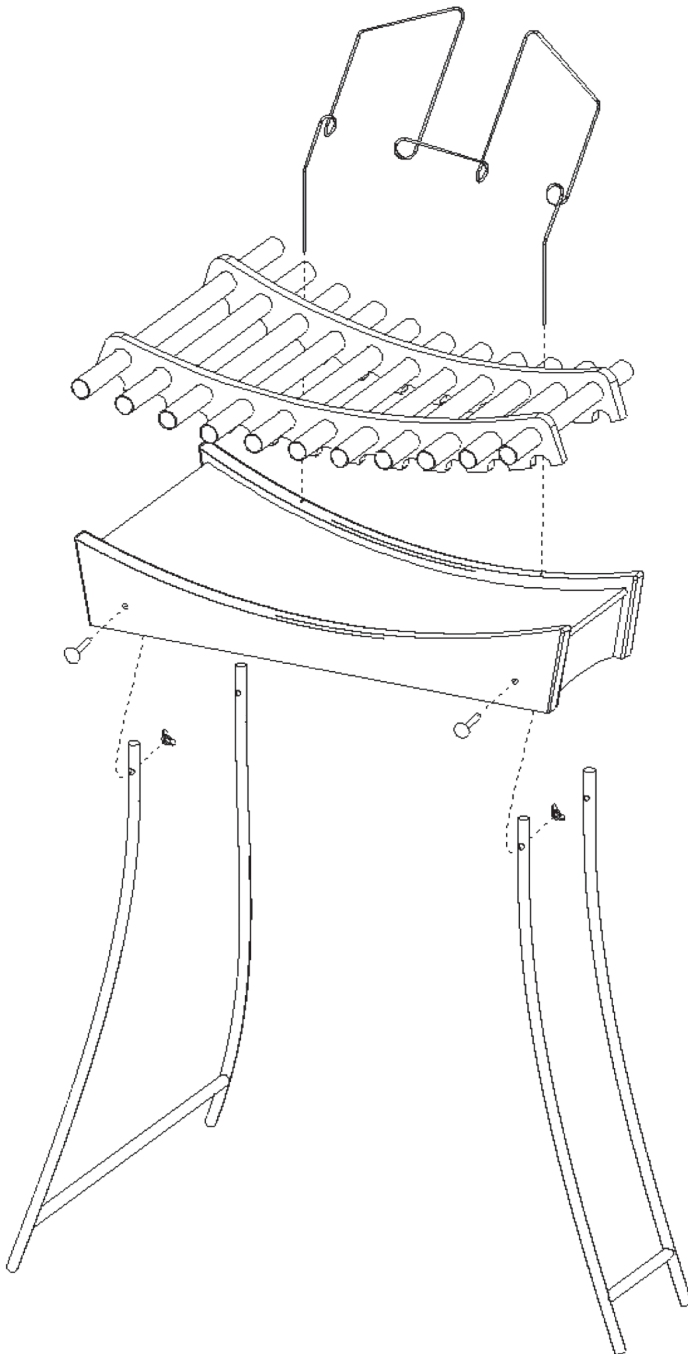

Completely unpack all the Chimalong XR parts. You should have two leg sets, frame, tube assembly, wire music book holder, music book, two mallets, four carriage bolts and four wing nuts.

Assemble the leg sets to the frame as shown, making sure to use all four carriage bolts and wing nuts. Hand tighten each wing nut until the bolt head is flush to the frame. It may be necessary to gently tap the bolt head with a hammer to completely seat it.

 **WARNING:**  
Must be assembled by an adult

 **WARNING:**  
**CHOKING HAZARD -**  
Small parts.  
Not for children under 3 yrs.



Woodstock Chimes®  
Shokan, NY 12481-5124  
woodstock@chimes.com  
www.chimes.com

©2018 WPI  
Rev. 06/29/18  
File # 2056INS062918