


Woodstock Metalworks Bell – Heroic
WMCY & WMCYR
Mounting Instructions

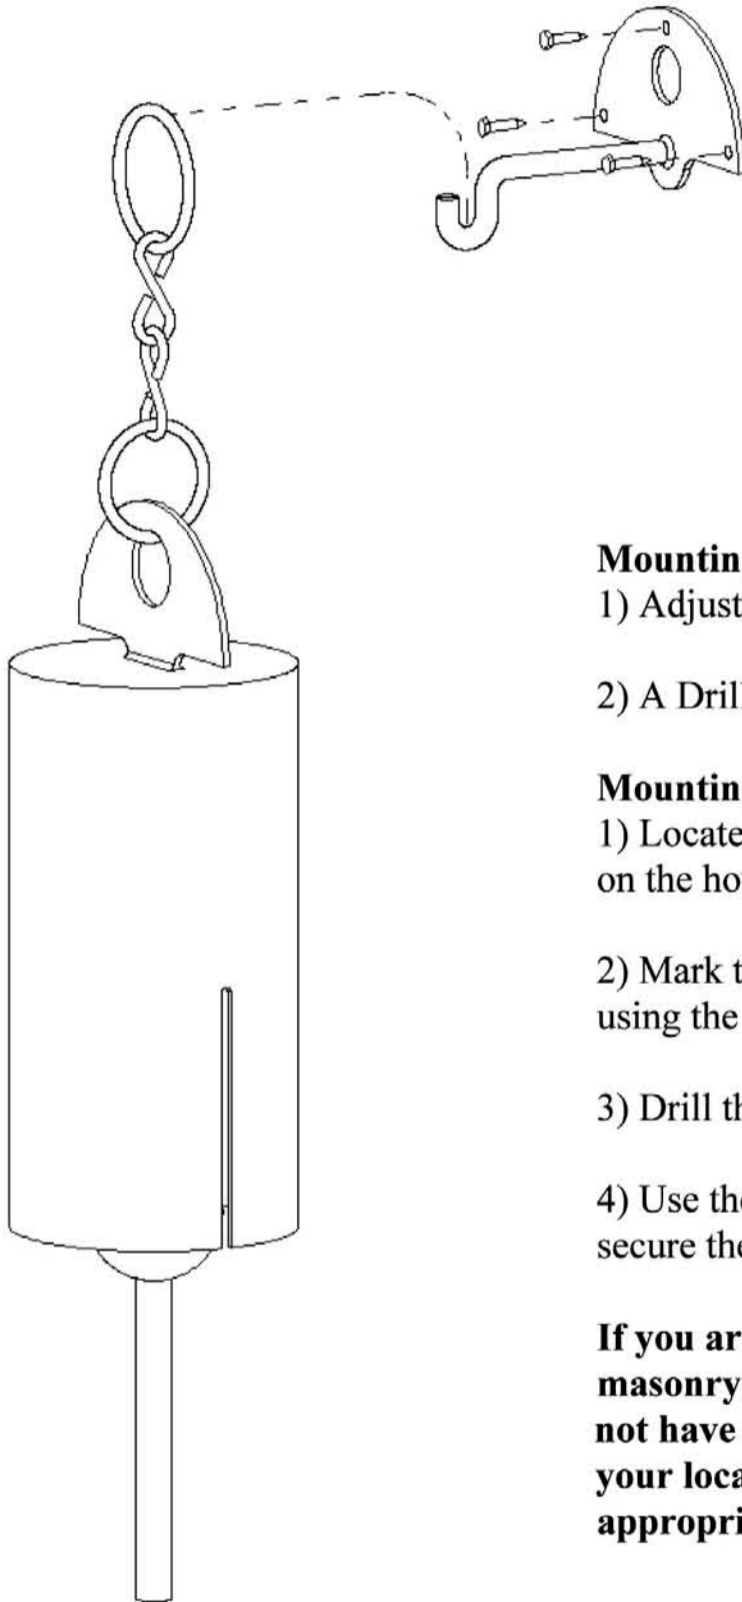

Mounting Instructions – tools required

- 1) Adjustable wrench
- 2) A Drill and a 3/16 Drill bit

Mounting the bracket

- 1) Locate the bracket on a flat wood surface or on the house siding.
- 2) Mark the location of the three 1/4" holes using the bracket as a template.
- 3) Drill three 3/16" pilot holes 1-1/2" deep.
- 4) Use the three hex-head screws supplied to secure the bracket to the wall.

If you are mounting the bracket to masonry, sheetrock or any surface that does not have solid wood backing, please see your local hardware dealer for the appropriate fasteners.

